





T Series Totem 10

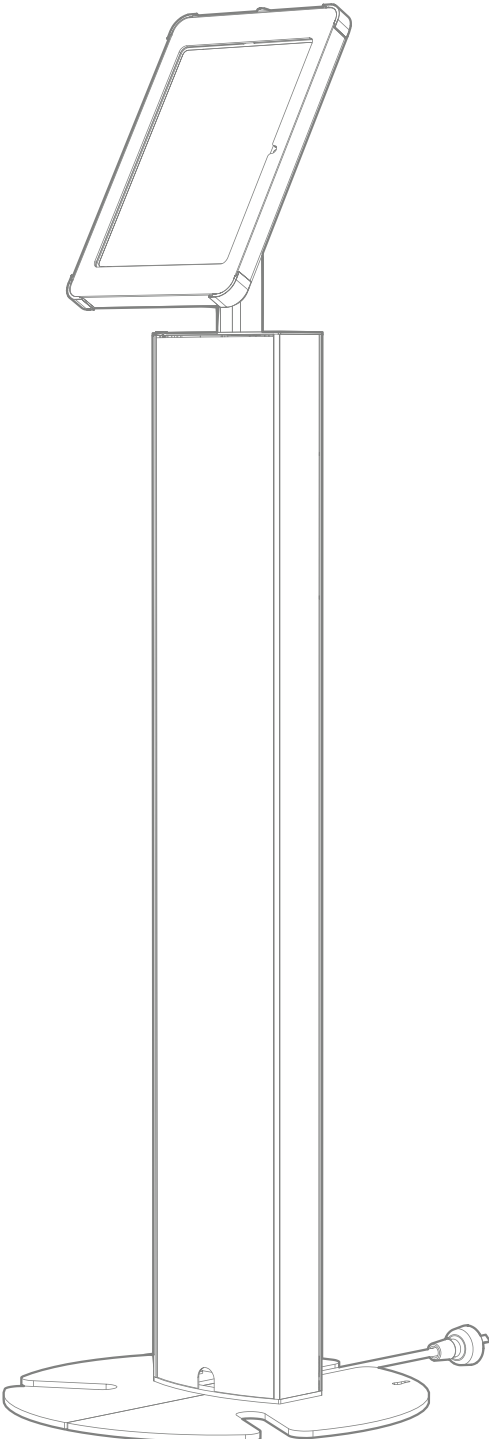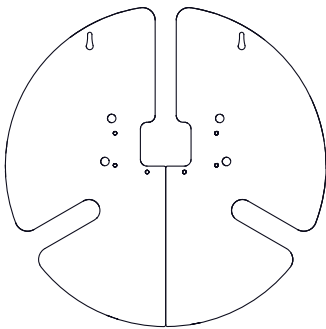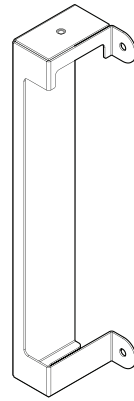

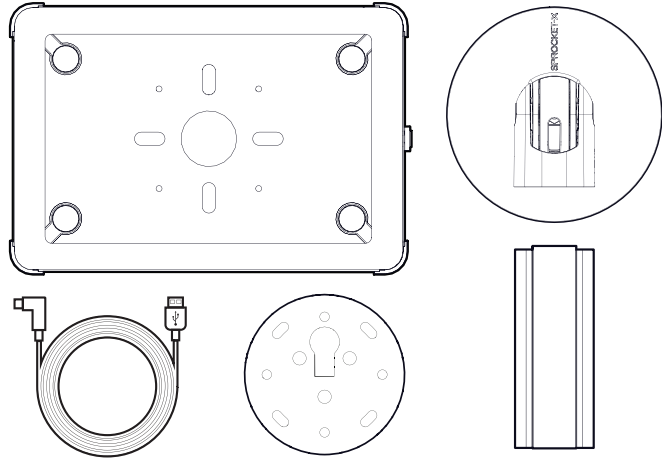

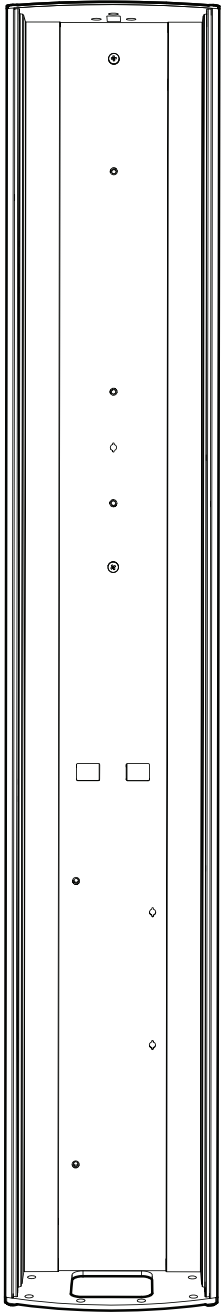


Version 1.0

Assembly Guide




SPROCKET









A	B	C	D	E	F	G
						
M5x10	M4x10	M6x16	M4x6	M3x8		
x6	x9	x4	x4	x4	x1	x1



STEP 1/5

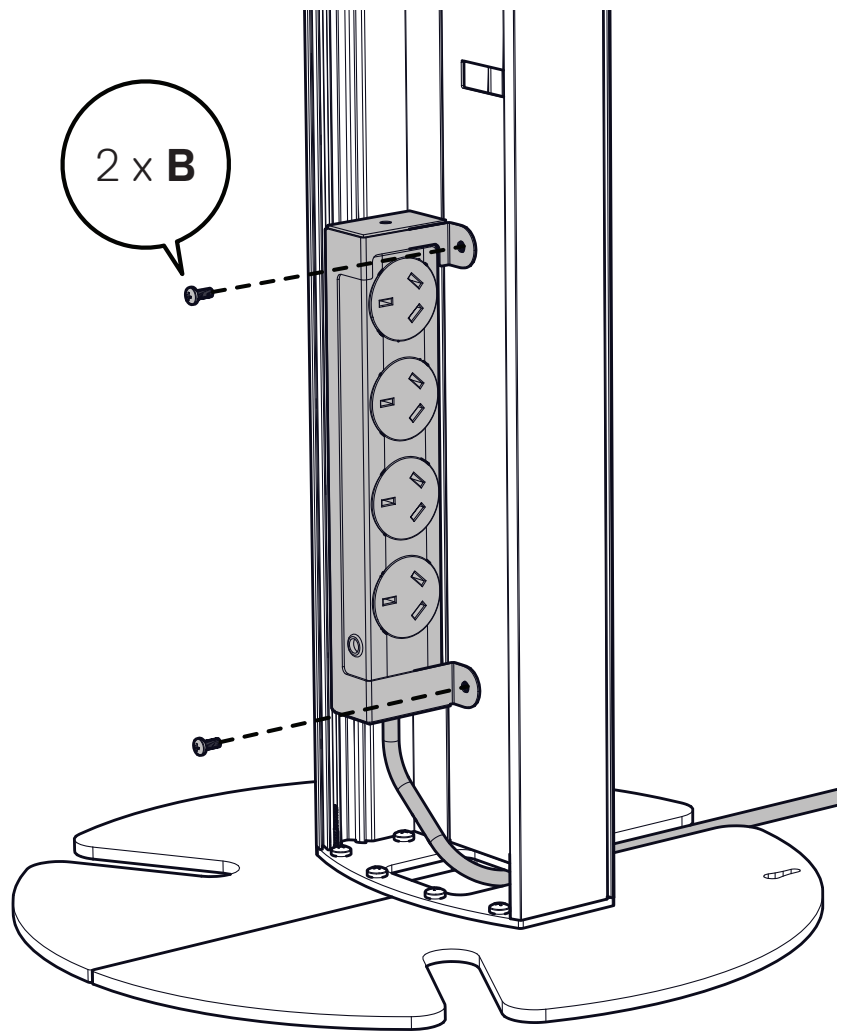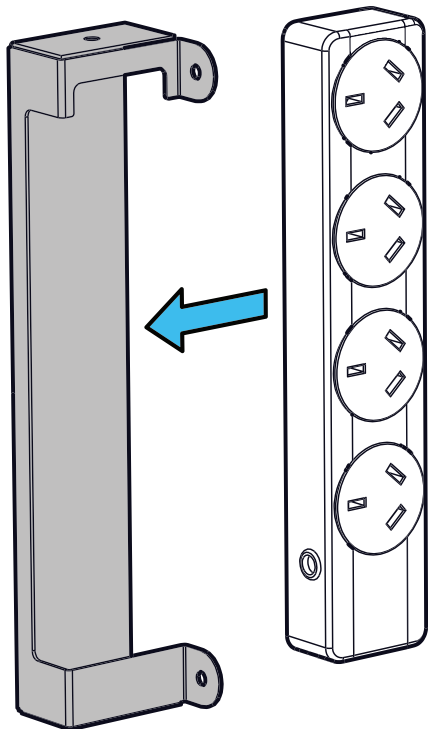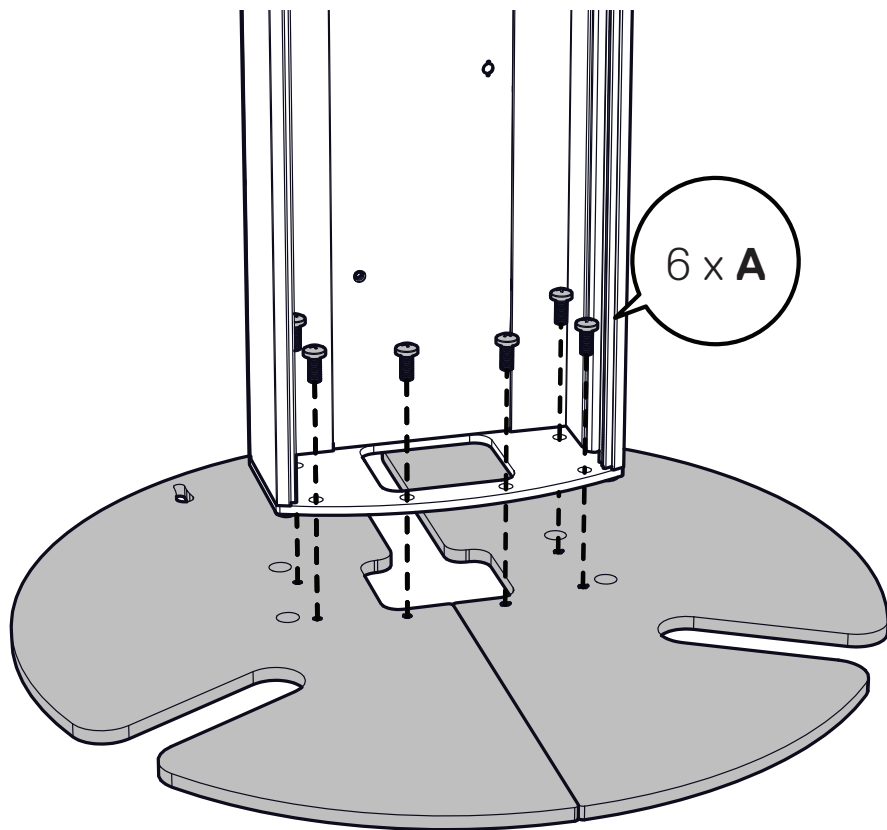





STEP 2/5

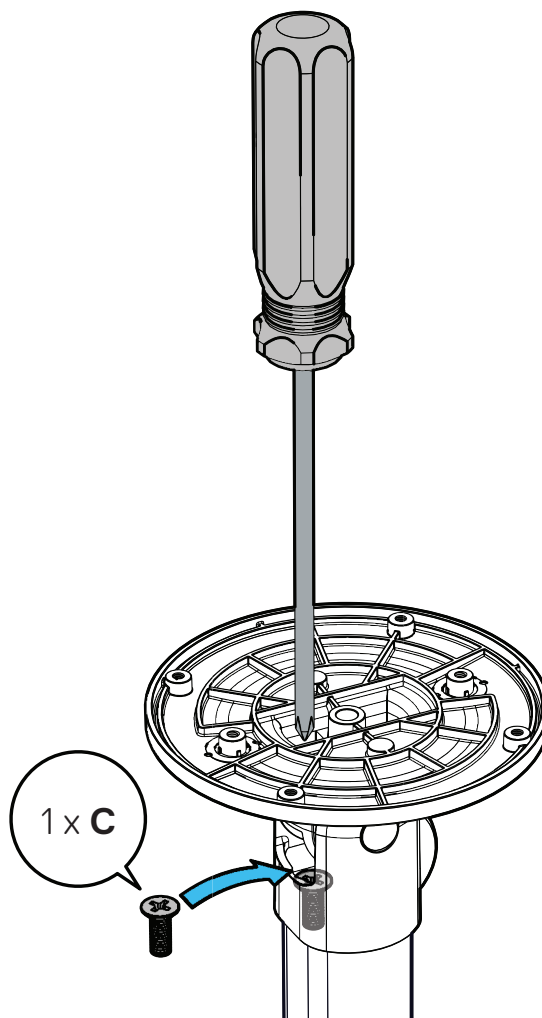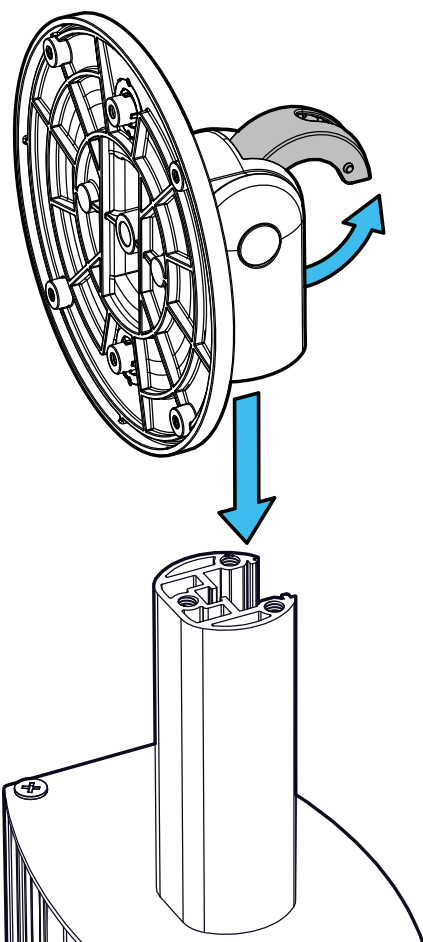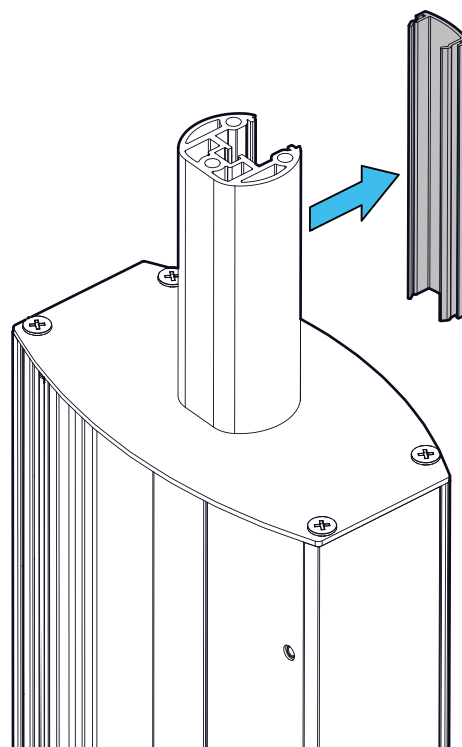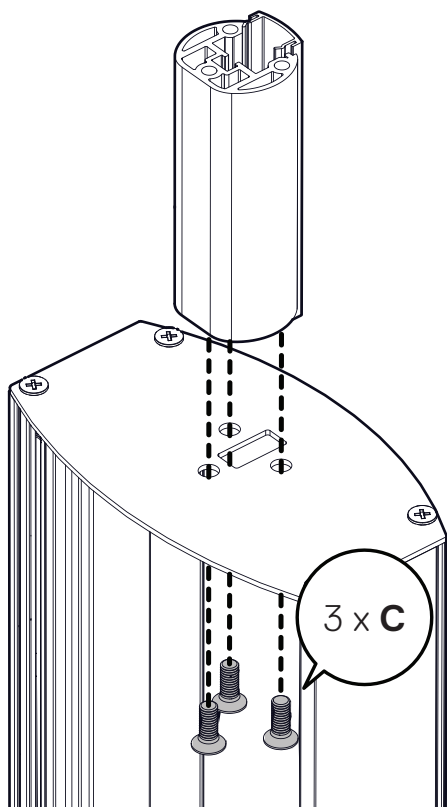

STEP 3/5

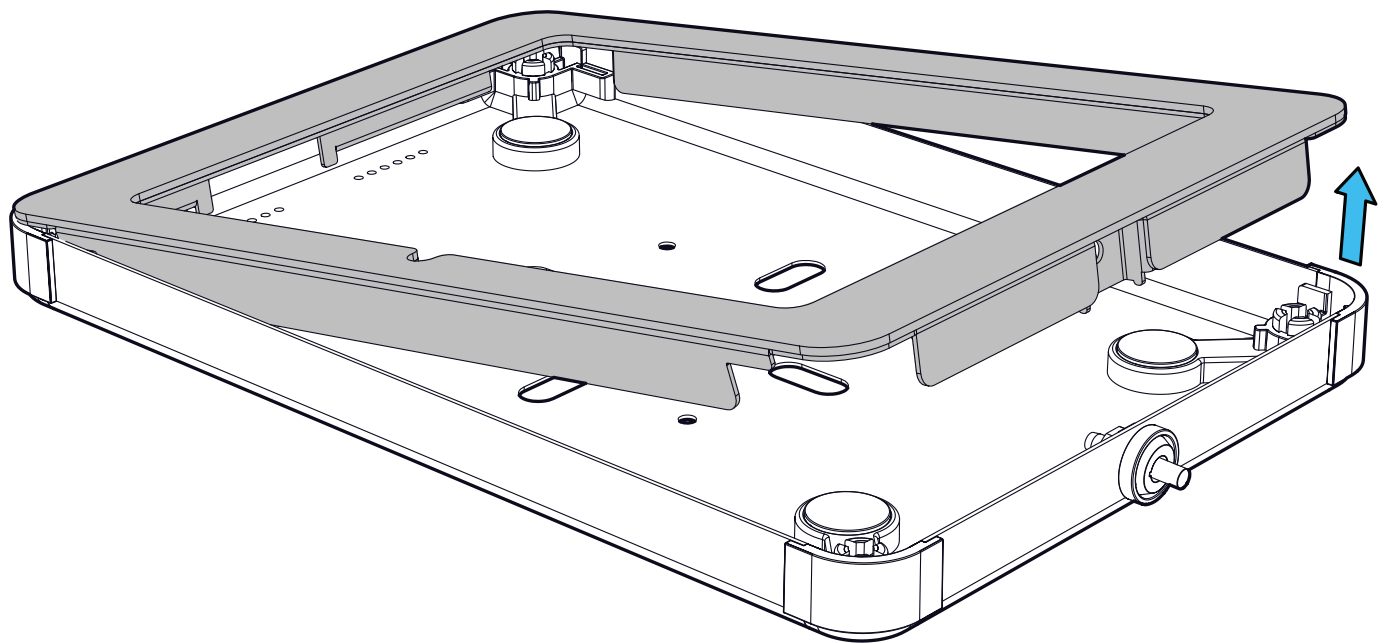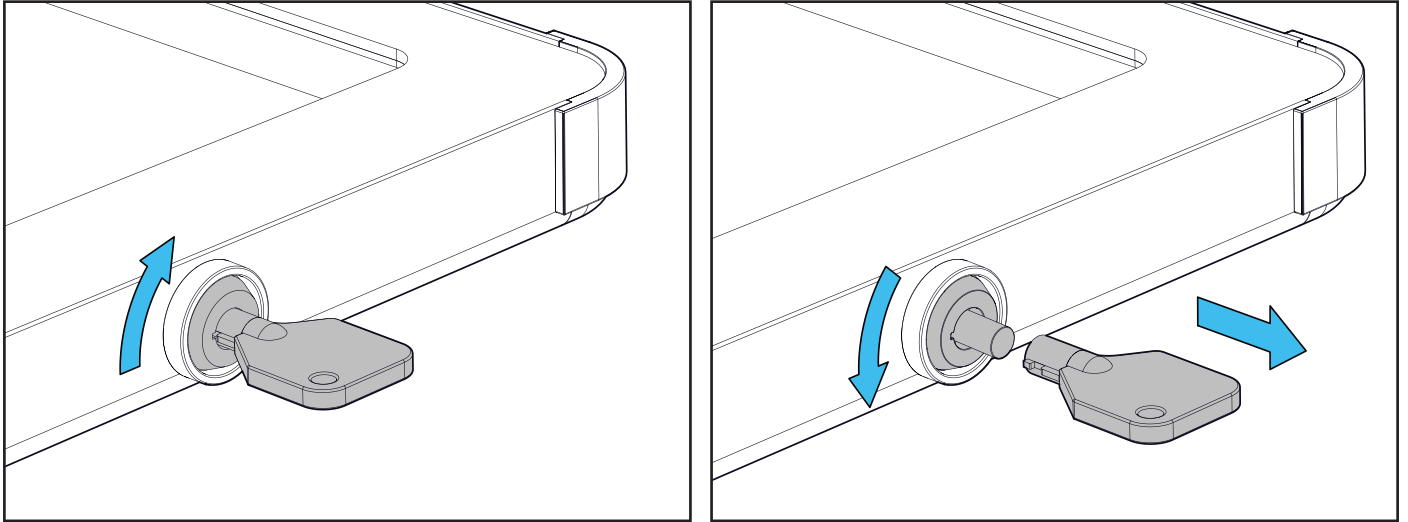

STEP 4/5

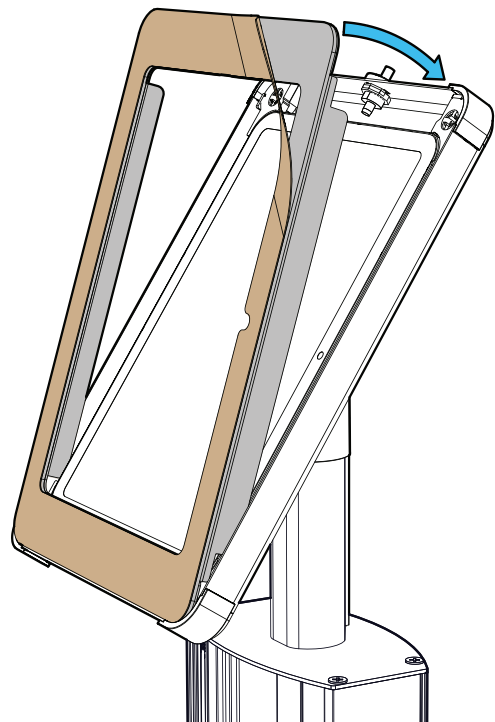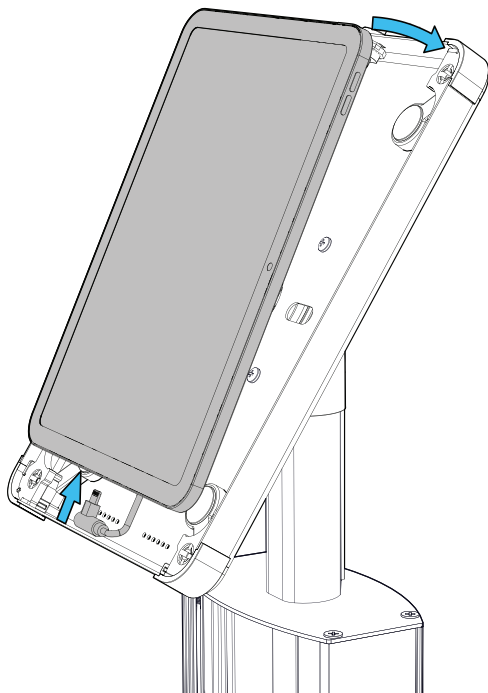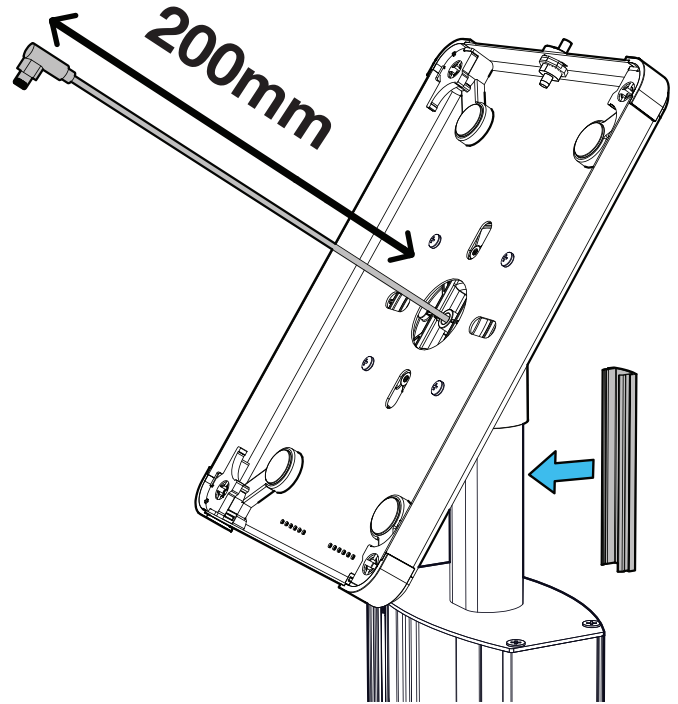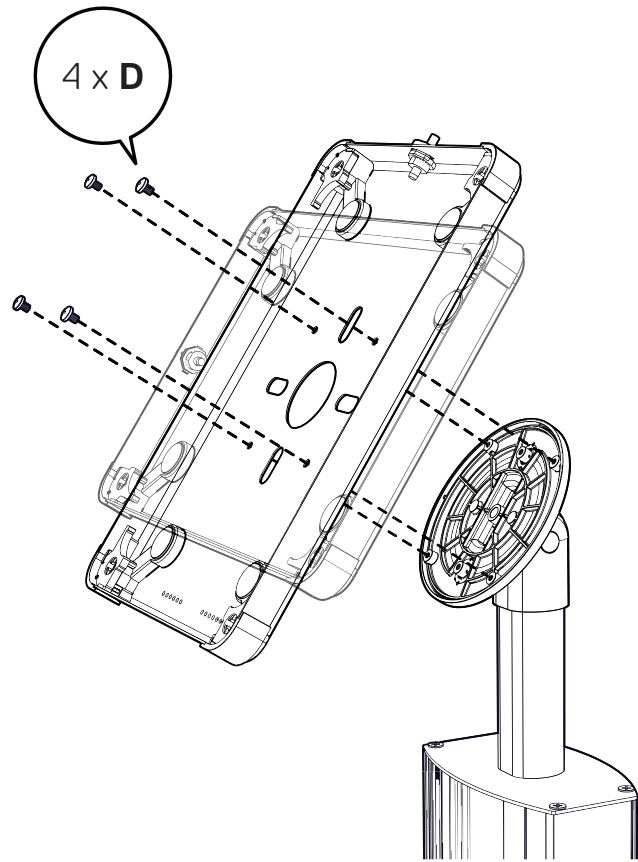

STEP 5/5

